




# Standard VoIP Desk Phones

## Connection Guide

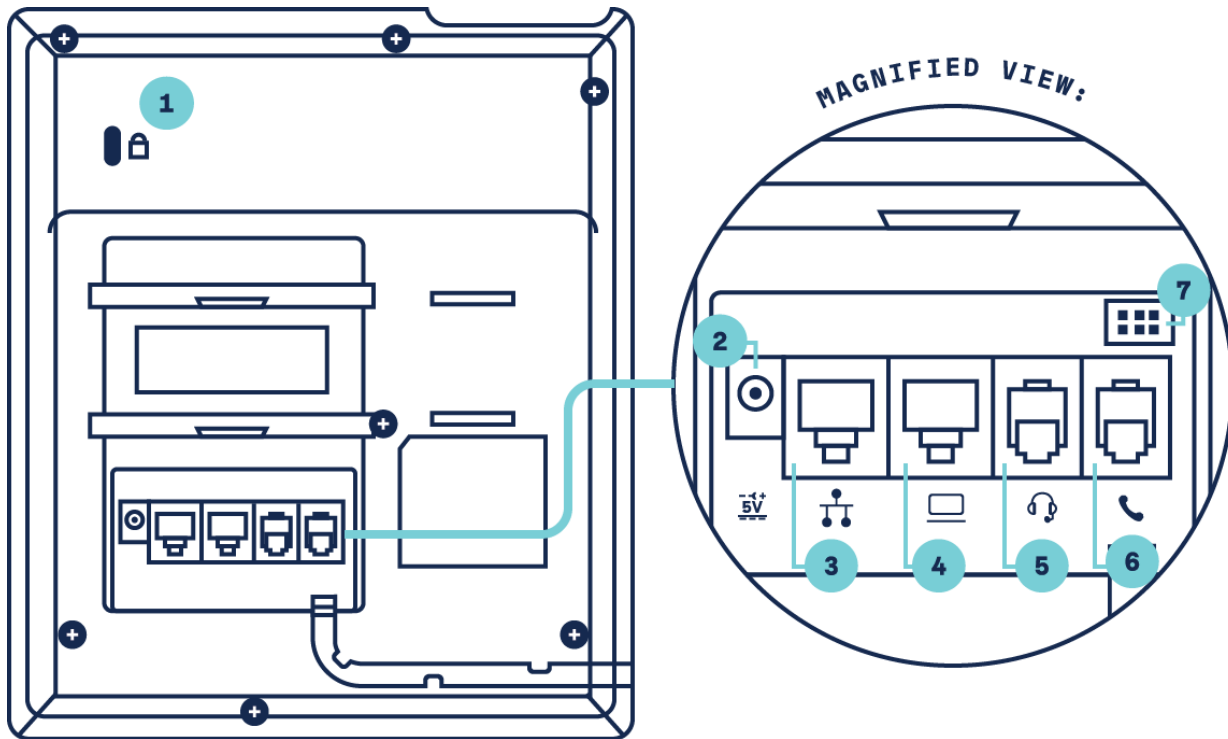

**1. Security Slot:** Attach a universal security cable lock to fix your phone to a desktop

**2. AC Power Connection:** For power adapter, if Power over Ethernet (PoE) is unavailable

**3. Ethernet Port:** For wired Internet connection and PoE. May be labeled as “Internet” port.

**4. Ethernet LAN Connection:** Passthrough connectivity to your computer using this ethernet port. May be labeled as “PC” port.

**5. RJ-9 Port:** Most standard, wired headsets will connect using this port

**6. Handset Port:** Your handset will connect to the receiver base

**7. EHS Port:** Electronic hook-switch headsets will connect here

Note that the layout of the phones may vary slightly by make and model.